 
# FST Scale Stickers (Horizontal Type)



## FST-R Zero point on the left



# **FST-L** Zero point on the right



# FST-C Center distribution



Thickness: approximately 0.3 mm

• Multiples of 0 and 50 are red.

#### Material/Finish



	FST
Main body	Polyester (transparent)



- Sticker type horizontal scale. Use by sticking to machinery and equipment.
- Standardized 100/200/300 mm scale length.
- Made of flexible polyester. Can be stuck to the curved surfaces of posts or shafts, plus can be cut to a desired length for use.
- Corners are rounded. Doesn't come off easily.
- There are 3 types of scales. They can be selected by the symbol of the part number.

Symbol	Scale
R	Zero point on the left
L	Zero point on the right
С	Center distribution

Precautions for Use

- **FST** Use the scale of the Scale Sticker as a general guideline.
- Thoroughly remove oil and dust on the sticking surface before sticking.

Unit:mm

Part Number 1	L <sub>1</sub>	L	Mass (g)
FST-100-R	100	108	0.5
FST-200-R	200	208	1
FST-300-R	300	308	1.5
FST-100-L	100	108	0.5
FST-200-L	200	208	1
FST-300-L	300	308	1.5
FST-100-C	100	108	0.5
FST-200-C	200	208	1
FST-300-C	300	308	1.5

## Related Products

Point Lens **FLE**, which is useful to read the scale, is available.



Part number specification

**FST-200-R** 



Scale Plate / Scale sticker Length Adjusutment → P.xxxx



